


JINWOO500 Work Area Diagram

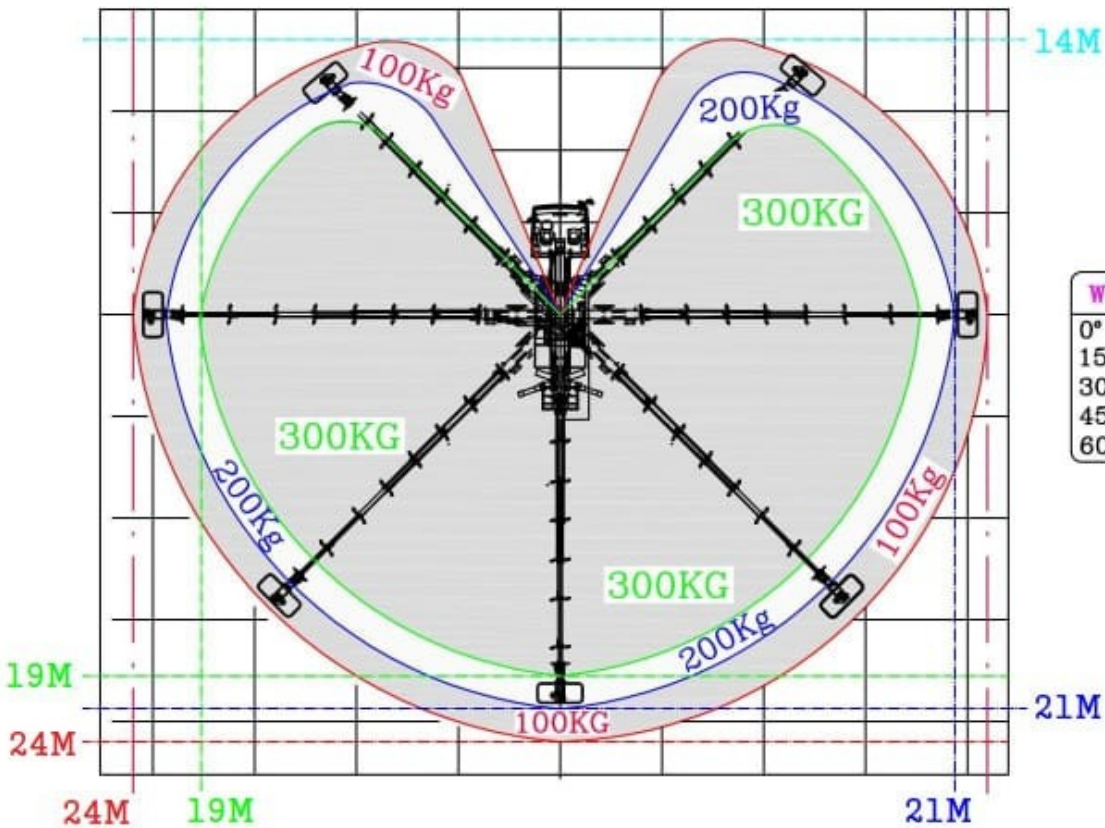

NOTE: * FRP Basket **not suitable** for working with LIVE High-Tension Voltage Wires.
Insulation is for operators within Basket only.

** Parameters Subjected to changes without prior intimation.

| WORK AREA (M) | |
|---------------|-------|
| 0° ~ 15° | = 09 |
| 15° ~ 30° | = 17 |
| 30° ~ 45° | = 25 |
| 45° ~ 60° | = 39 |
| 60° ~ 80° | = MAX |

